

User Manual

DIGITAL MICRO JUKE BOX HMP-110(R)



Thank you for purchasing this product.
Please read this manual carefully before using the product.
Familiarizing yourself with the instructions and functions
explained in this manual before operating the product will
ensure proper use of the product.
Please fill in and keep the warranty included in this manual
from your product distributor.

SAFA SAFA MEDIA Co., Ltd.

Features

1. Equipped with a 1.5GB HDD for large-scale storage.
2. PC net PC function which allows remote PC control.
3. Convenient downloading by the USB Mass Storage (UMS) function.
4. Supports Multi-Codec Playback for MP3, OGG, WMA and ASF files.
5. Supports Encoding for voice records and sound from external devices into MP3 file.
6. Supports Multiple-Languages.
7. FM Radio and FM Recording.
8. Firmware Upgrade function.
9. Supports ID3 tags and lyrics.
10. Useful Memo function.
11. Supports 6-Mode Equalizer (EQ): Normal, Rock, Classic, Jazz, Bass, and User EQ.
12. Repeat Playback and Shuffle Playback.
13. Low and High Speed Playback.
14. My Logo function.
15. Effective Memory Management using the CD-Sync and VOR (Voice Operated Recording) functions.
16. Cool Electro-Luminescent Backlighting.
17. Rechargeable by AC Adapter and USB.
18. Convenient Navigation structure.
19. Wide LCD Window (5 Lines display).
20. Supports Program Playlist (Bookmarks, M3U Playlist).

Contents

Before You Use


◆ Charging	2
◆ Safety Instructions	3
◆ Package	5
◆ Hardware Features	6

Connecting to a PC

◆ Installing Programs	8
◆ Installing the USB Driver	9
◆ Using Juke Box as a Local Disk	13
◆ Disconnecting the USB Cable	16

Basic Operations

◆ Using Juke Box	17
◆ Listening to Music	18
◆ Changing Modes	21
◆ Before Making a Recording	22
◆ Voice Recording	24
◆ Recording Sound from an External Device	25
◆ Listening to FM Radio	26
◆ Recording to FM Radio	30
◆ Text View	31
◆ Using the Menu	32

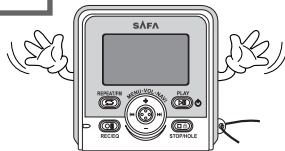

Advanced Operations

◆ Repeat / Shuffle Playback	33
◆ Equalizer Function	34
◆ Playlist	35
◆ Navigation	37
◆ Using the Memo Function	38
◆ Using the Logo Function	40
◆ Using a PC net PC	42
◆ Additional Menu Functions	45
◆ Upgrading Firmware	51

Customer Support

◆ Troubleshooting	52
◆ Specifications	53
◆ Warranty	54



Charging



Using the AC Adapter

1. For your safety, use only the AC adapter included in the product package.
This product can be used within the 110V to 220V range.
2. Connect the adapter to the 5.0V jack on your Juke Box.



Charging the Battery

- The battery is automatically charged when the product is connected to an external power source.
- When the battery is charging the backlight changes to red.
When it has finished charging, it changes to yellow.
Disconnect the external power source from your Juke Box when the backlight is yellow.

Charging Time: 1) AC Adapter : 3 hours
2) USB: 10 hours


Continuous Playback Time : 10 hours (when Battery fully charged)



Caution

The USB can only be charged when the main power of your Juke Box is turned off.

Safety Instructions

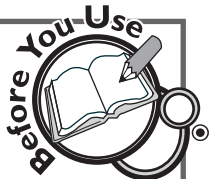

**Keep these instructions for your safety and preventing property loss.
Please read the precautions given below carefully before using your Juke Box.**

1. Do not disassemble, repair or modify this product.
2. Do not use the product in an airplane or any place that prohibits the use of electronic devices.
3. Do not get the product wet. The product should not be in contact with any liquids (such as drinks).
4. Observe copyright laws regarding recordings. The copying of recordings except for personal use is prohibited by law.

Precautions for Use

1. Do not drop the product or submit it to impact.
Dropping the product or submitting it to impact can cause the product to malfunction.
2. Do not place the product in an area exposed to heat, direct sunlight, dampness, moisture, rain, vibration, shock, dust or sand.
Do not place the product on an incline, nor inside a car whose windows are closed.
3. Do not place the product near any kind of magnet or expose it to excessive vibration




Note


Please adjust the sound level appropriately with the volume control, listening to loud music can permanently damage your hearing.




Safety Instructions

1. Do not drop the main body, accessories or submit them to any impact, as this can cause the product to malfunction.
2. Do not submit the LCD to excessive force or shock as this can cause the display to malfunction.
3. Do not place the product for long periods in an area exposed to direct sunlight or near a heating appliance.
4. In no event will Safa media, Co., Ltd. be responsible or liable for indirect or consequential damages resulting from the use of this product nor for reparation for damages from third party.
5. Safa media, Co., Ltd. does not assume responsibility or liability for corruption or loss of the data saved in the memory while using or repairing the product. Make sure to backup important data from your product to your PC or any other storage device.
6. Irrational or unintended use of the product, such as privacy invasion or wire tapping, is prohibited.

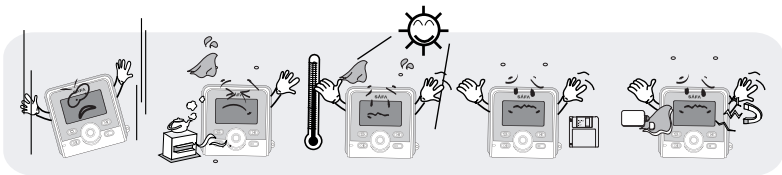

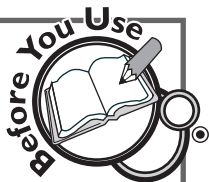


Package

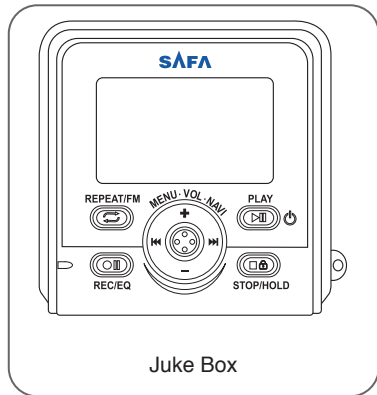

Earphones



 Audio Cable



AC Adapter



CD-ROM



USB Cable




Juke Box Case



User Manual




* Accessories and its specifications are subject to change.

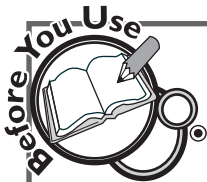


Hardware Features




Hardware Features

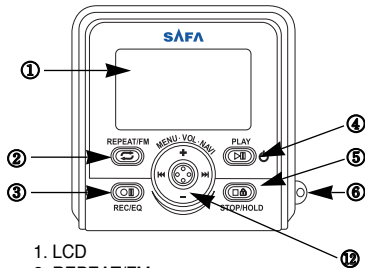

1. LCD
2. REPEAT/FM
Repeat mode, Switching to FM mode
3. REC/PAUSE, EQ
Record/Pause, Equalizer mode
4. PLAY/PAUSE, POWER ON/OFF
Playback/Pause, Power On/Off
5. STOP/HOLD
Stop/Locks key
6. Necklace/Hand Strap Latch

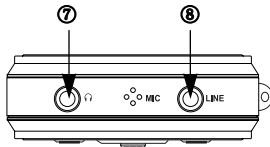

7. Earphone jack
8. Line Input jack
9. USB jack
10. DC Power jack
11. Reset
12. Jog Key for Navigation, Menu and Volume control
(MENU · VOL · NAVI)

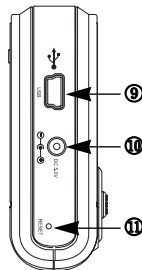

Enter the Menu, Scan, toggle between FM Frequency/Preset mode



Previous Song, Fast Rewind, Move to the Previous Menu



Next Song, Fast Forward, Move to the Next Menu



Move Up, Increase Volume



Move Down, Decrease Volume

Hardware Features



LCD Screen Modes

Stop screen

Open Folder →

Closed Folder →

File →

Record screen

Recording Input

Recording Method

Menu screen

Keys available for the current menu

Playback screen

Repeat mode

Equalizer mode

FM screen

Frequency/Preset mode

Playlist screen

Lyrics screen


FM Recording screen

USB Connection screen



Software Installation

When you insert the provided CD into the CD-ROM drive, the installation program will be automatically started. Install the program following the process below.

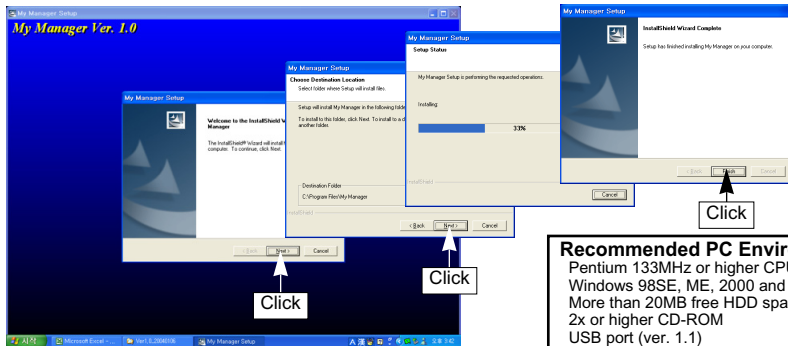

You will see the following icons on the desktop when installation is successfully completed.



My Manager



PC net PC

Recommended PC Environment


Pentium 133MHz or higher CPU
Windows 98SE, ME, 2000 and XP
More than 20MB free HDD space
2x or higher CD-ROM
USB port (ver. 1.1)
VGA graphic card

- Install the software using the administrator's account in Windows 2000/XP.
- The MP3 driver will be automatically recognized by Windows ME/2000/XP without additional software installation. However, you should install the software in order to use the additional functions such as My Logo or the memo writing functions. (Be noted that Windows 98 original version is not supported.)
- It cannot be installed on MAC operating system.


Installing the USB Driver



1. Connect your Juke Box with your PC by USB cable, as shown in the following figure.
(Make sure that the Juke Box power is turned on.)

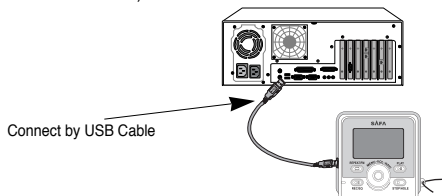

 When the cable is connected successfully, the LCD screen mode changes as shown in the following figure.



2. The message shows that your computer is searching the new device is displayed, and your computer will setup the USB Driver. The setup screen may not be displayed. Check that it has been installed correctly using the Device Manager.



Installing the USB Driver

- ◆ **Installing USB driver manually**(This section is not applicable if the USB driver is installed normally.)
If the USB driver is not installed automatically, install it manually as described below.

- **Windows 2000 ME, Windows XP**

1. Insert the CD in to the CD-ROM drive of PC.
2. Control Panel → System → Device Manager → Universal Serial Bus Controller → Double-click the device name with exclamation or question mark.
(See page 11 to see how to select the menu.)
3. Driver → Driver Update → Install from the List or Specific Location → Next → Browse → D:\Driver → Next → Finish



Note

If the USB driver is not automatically recognized by Windows 2000, download and install the latest service pack from Windowsupdate.Microsoft.com. The installation method may differ depending on the types of PC and environment. If you still cannot install the USB driver, contact the support center of the PC manufacturer. If you meet an installation error continuously, reboot the PC and reconnect the USB cable again.






Installing the USB Driver

● Windows 98SE

For Windows 98, make sure to install the program with the Installation CD. Otherwise your Juke Box can not be used as a local disk. Make sure to install the USB Driver before using your Juke Box.

※ Window 98 Original Version is not supported.

1. Insert the Installation CD in to the CD-ROM drive of your PC.
2. Press the **Next** button when the setup window appears. Press the **Finish** button when installation is completed.

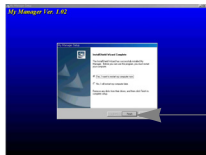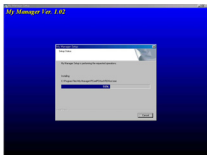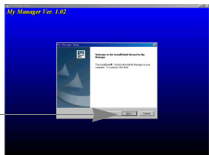

3. The PC will be rebooted. When the PC is re-started, turn the player on and connect the USB cable.
4. You should specify the drive after USB connection.
 - 1) Mass Storage Device
New hardware is detected.
 - 2) Device to search the driver: Mass Storage Device
Device driver is a software program that activates hardware. → **Next**
 - 3) What do you want?
 - ▶ Search for and install the hardware automatically (Recommended)
 - ▶ Install the hardware that I manually select from a list (Advanced)
 - 4) Specifying the driver path → Windows/System/PreCOPY
When you specify the path as described above, local disk property window will appear.



Note

Make sure to reboot your computer after installing the driver.



Installing the USB Driver

- ◆ How to check whether the USB driver is installed properly in the Device Manager
- Windows 2000 ME, Windows XP
Control Panel → System → Hardware → Device Manager → Universal Serial Bus Controller → USB Large Storage Device

Click

Click

Click

Double click

 
If it is displayed as below, it's OK.


- Windows 98SE
Control Panel → System → Device Manager → Universal Serial Bus Controller



Using Juke Box as a Local Disk



When your Juke Box is connected to your PC after installing the programs and USB driver, it is recognized as a local disk on your PC. Therefore, you can download files to your Juke Box and use it as an external storage device as well.

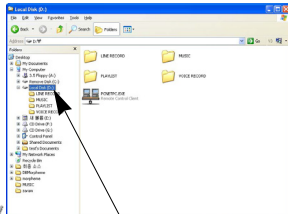1. Turn your Juke Box on.
2. Connect your Juke Box to your PC. (Refer to page 9)
3. Click  when the screen shown in the figure below is displayed on your PC.



4. Double-click  or . If connected correctly, you will find that your Juke Box has been added as a local disk on your PC, as shown in the figure above.



Caution



1. Do not change the name of the MUSIC, VOICE RECORD, LINE RECORD and PLAYLIST folder.
2. A USB connection is available only when your Juke Box is turned on.





Using Juke Box as a Local Disk

5. Select the files that you want to download from your PC and copy them to the MUSIC folder of the Juke Box local disk. (It is the same as file copying on PCs. You can drag and drop the files from the local disk to your PC to copy them.)

Select the files you want to copy and click the right mouse button. → Click **Copy**. → Select the **MUSIC** folder of the local disk. → Click the right mouse button. → Click **Paste**.

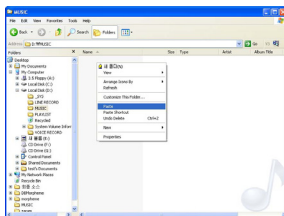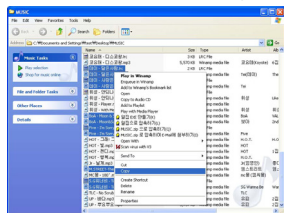

  
The Copying window is displayed on your PC monitor and the copy screen is also displayed on the LCD of your Juke Box, as shown in the following figures.



Using Juke Box as a Local Disk



 6. Wait until the copying window has closed on your PC, then remove the USB cable and continue to use your Juke Box.



Caution

1. Do not remove the USB cable during downloading.
This may cause a malfunction to your PC or the Juke Box.
2. Do not connect the earphones or an audio cable during downloading.
3. The copying operation may be delayed if there are many folders and files are to be copied.
4. The order in which music files are displayed when you select the local disk in Windows Explorer has no relationship with their playback sequence.



Caution


If you delete the files on the local disk from you PC, they are moved to Recycle Bin of your PC. You should empty the Recycle Bin if you want the correct size of the local disk to be displayed.



Disconnecting the USB Cable

To disconnect the USB cable after the file transfer is finished, make sure to follow these steps.

1. Click the Unplug or eject hardware icon on the System Tray of your PC, as shown in the following figure. (For Windows 98SE, the Unplug or eject hardware icon is not displayed. Therefore, just disconnect the USB cable 3 or 4 seconds after the time that the Copying window has closed on your PC.)
2. Select [USB Mass Storage Device] and click the [Stop] button.

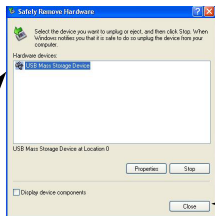

3. Click [OK] on the Stop a Hardware Device window.



4. Disconnect the USB cable.



Caution

1. Your Juke Box will not operate if the USB cable is connected to your PC.
2. The Juke Box main power is turned off automatically when the USB cable is disconnected.
3. To connect your Juke Box to your PC again, first disconnect the USB cable then turn on the main power of your Juke Box and then re-connect the USB cable.


Using Your Juke Box

Power On/Off

1. Press and hold the PLAY (▶||) key to turn on your Juke Box.



 
Press and Hold



2. Press and hold the PLAY (▶||) key again to turn off your Juke Box.



Jog Key Functions

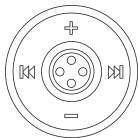

- 1) (⬇️) Entering the Menu, Scan, toggle between FM Frequency/Preset modes
- 2) (⏮️) Previous Song, Fast Rewind, Move to the Previous Menu
- 3) (⏭️) Next Song, Fast Forward, Move to the Next Menu
- 4) + Move Up, Increase Volume
- 5) - Move Down, Decrease Volume



Listening to Music


1. Press and hold the PLAY (▶||) key to turn on your Juke Box.



Press and Hold



2. Select the desired file using the Jog key.

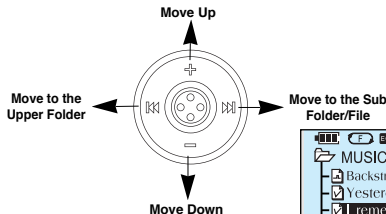

3. Press the PLAY (▶||) key to playback the selected song.

If you select a folder and press the PLAY (▶||) key or Jog key, all the songs in the selected folder are played back sequentially starting with the first song.



Press and shortly




Caution

If you press the REC/EQ key while in the PLAY (▶||) or Pause mode, a recording will not occur.

Listening to Music



4. Key Operations during Playback

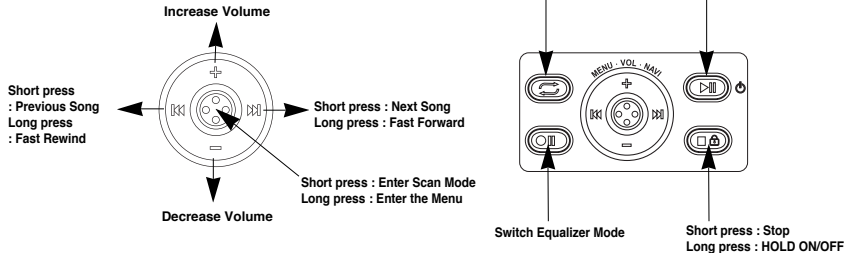


5. Enjoy your songs after setting the volume and the appropriate equalizer mode. (See page 35)




Listening to Music

5. HOLD ON/OFF

 Press the STOP/HOLD key (■ 🔒) longer to prevent key operation.
Press the button longer again to set the hold off



HOLD ON

 


HOLD OFF

 


Note

1. HOLD will be enabled only when the power is on.
2. Set the password to prevent automatic power on when the power is turned off.
(see page 50)

Changing Modes


Your Juke Box has two playback modes, Player mode and FM mode. Player mode is used to playback MP3, WMA, OGG and/or ASF files and FM mode is used to hear FM radio broadcasts. Each long press of the REPEAT/FM () key toggles between Player and FM modes.



Press and Hold



 

Stop screen on the LCD



FM mode screen on the LCD



Caution

 
 
While playing a file, you cannot switch the playback mode to FM mode. First, press the STOP/HOLD () key to stop playback, and then press the REPEAT/FM () key to switch to FM mode.




Before Making a Recording

- ◆ **Setting the Sound Quality of the Recording.** Your selection will determine the file format, sound quality, and maximum recording time for your recordings. Make sure to select your desired settings before making a recording.

1. Enter MENU → RECORD → QUALITY .



2. Select one of the following modes by using the + and – buttons on the Jog key, and then press the (MENU · VOL · NAVI)  key.

Mode	Sound Quality of Recordings			Maximum Recording Time [Minute]	Remarks
	Sampling	Mode	Format	HMP-110R	
32Kbps	44KHz	J.Stereo	MP3	5802	Voice recording is recommended. Music/FM recording is recommended.
64Kbps	44KHz	J.Stereo	MP3	2901	
96Kbps	44KHz	J.Stereo	MP3	1934	
128Kbps	44KHz	J.Stereo	MP3	1450	
192Kbps	44KHz	J.Stereo	MP3	967	



Note

※ The memory capacity of this product is rated as 1.5GB, however the available capacity is 1.36GB. Your Juke Box uses a portion of the memory for its basic operations.

 
 
J-Stereo means Joint Stereo, which reduces memory usage by rendering frequencies as mono and pitches as stereo in the high-pitched range, while still producing a stereo effect.

Before Making a Recording




◆ Setting the Recording Method

1. Enter MENU → RECORD → METHOD.



(When setting CD-Sync)

 

2. Select one of the following modes by using the + and – buttons on the Jog key, and then press the (MENU · VOL · NAVI) key.

Mode	Operation
OFF	General Recording Mode
VOR	When making a voice recording this function will automatically detect sections that need not be recorded because the sound level is too low, and automatically pauses the recording in those sections.
CD-Sync	When recording several files from an external device, this function automatically detects the silent sections between two files and records them as separate files by using those silent sections as the file separator. The interval of the silent section can range from 3 to 7 seconds.



Note

- In CD-Sync mode, the number of recorded files may not be the same as that of the original files.
- In CD-Sync mode, recording will stop automatically if a silent section continues for more than 10 seconds after the silent interval you have selected.




Recording Voice

◆ Recording Using the Built-In Microphone


1. Press the REC/EQ (● ||) key in stop mode.
2. Press the REC/EQ (● ||) key to pause a recording in progress, and then press the REC/EQ (● ||) key again to resume the recording.



 Stop mode



Recording mode

 


Pause mode

3. Press the STOP/HOLD (■ □) key to stop the recording.

◆ Recording Using an External Microphone

1. Connect an external microphone as shown in the following figure.
2. Press the REC/EQ (● ||) key in stop mode to start recording.
3. The other functions are the same as Recording Using the Built-in Microphone.

 

Caution

Make sure to only briefly press the REC/EQ (● ||) key to make a recording using an external microphone. If you press and hold the key, your Juke Box will operate in Recording Sound from an External Device mode, not in the Recording Using an External Microphone mode. Therefore, you may get unexpected results.

Recording Sound from an External Device

This function allows you to record the audio signals from an audio device or PC.

1. Connect your Juke Box to the external device using the cable included in this package.



2. Press and hold the REC/EQ (● ||) key while in stop mode to begin recording.



Caution

Make sure to press and hold the REC/EQ (● ||) key when recording sound from an external device. If you only briefly press the key your Juke Box will operate in Recording Using an External Microphone mode. Therefore you may get unexpected results.

3. The other functions are the same as Recording Using the Built-in Microphone.

1. Voice recording files are saved to the VOICE RECORD folder, and external device and FM recording files to the LINE RECORD folder. File names are automatically given. They are classified according to the recording signal, as shown in the table below.

File Name	Recording Signal
Voice Recording File	ENCV-001
External Device and FM Recording	ENCL-001

2. To hear recorded files, select the desired files in the VOICE RECORD and LINE RECORD folders using the Jog key and press the PLAY (►||) key.

 


Note




Listening to FM Radio

1. Connect earphones to the earphone jack of your Juke Box.
Since the earphones are used as an antenna, the reception may be poor if earphones are not connected.




 2. Press and hold the REPEAT/FM (↺↻) key to switch to FM mode.
Switching to FM mode is available only while the player is stopped.



3. Key Operations in FM Mode


Short Press: Frequency/Preset Down
Press and Hold: Auto Scan Down

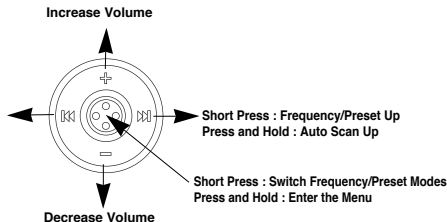


Listening to FM Radio

Short Press: Frequency and
Memory Function
Press and Hold: FM ON/OFF


Broadcast Recording

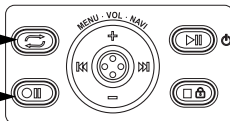

- Select the desired broadcast by pressing the ◀◀ and ▶▶ buttons on the Jog key. Each click of the ◀◀ or ▶▶ button on the Jog key increases or decreases frequency by a step.
Auto Scan: Press and Hold the ◀◀ or ▶▶ button on the Jog key to scan for the nearest broadcast frequency to the current frequency.
- Press the MENU · VOL · NAVI (⊕) key to switch between Frequency and Preset modes. In Frequency mode, pressing the ◀◀ or ▶▶ button on the Jog key increases or decreases the frequency. In Preset mode, the same operation moves up or down to the next stored channel, i.e., the next preset channel. These two-mode operations provide you with a convenient way to select channels.

 

Frequency Mode screen

 

Preset Mode screen




When there are no channels memorized

 


Listening to FM Radio

6. Memorizing a Broadcast Channel

Scan the channel you want to memorize by pressing the **◀▶** and **▶▶** buttons on the Jog key and briefly press the REPEAT/FM () key. You can memorize up to 20 channels.

A Broadcast Channel is Memorized





7. Automatically Memorizing a Broadcast Channel (AUTO MEMORY)

Enter MENU → FM → AUTO MEMORY

Select YES and press the (MENU · VOL · NAVI)  key to begin the Auto Memory function.

  When Auto Memory is complete, your Juke Box automatically switches to Preset mode and receives Channel 1.



Caution

If a broadcast channel is already memorized, it will be overwritten by the new selected channel.

 
Listening to FM Radio




8. Deleting a Memorized Channel

Select the frequency to delete by pressing the ◀◀ or ▶▶ button on the Jog key and briefly press the REPEAT/FM(↺) key. (The Deletion method is the same for Preset and Frequency modes.)

Channel
to Delete



Deleted


 


9. Listening in Mono mode

Noises may occur when you listen to a broadcast in an area where the signal is weak.

If this occurs, try listening in Mono mode to decrease the noise.

  MENU → FM → ST/MONO







Recording to FM Radio

Recording FM Broadcasts


1. Press the REC/EQ (●||) key while listening to a broadcast channel.

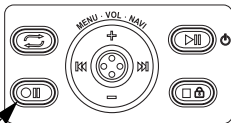

Press

 

FM mode LCD screen

 

FM mode LCD screen


Noises may occur when you listen to a broadcast in an area where the signal is weak.

2. Press the STOP/HOLD (■🔒) key to stop recording.
3. To hear the recorded broadcast press and hold the REPEAT/FM (↺) key to exit FM mode.
Select the desired file in the LINE RECORD folder using the Jog key.
Press the PLAY (▶||) key to playback the selected file.

Text View

To view TEXT file...

 1. Copy memo note in the Document folder. If turning the set on and entering into the Document folder, you can view the memo note file.



Status with TEXT file contained



Displayed when reading TEXT file



Displayed when exceeding 64KB



Caution

1. You can view only files of less than 64KB.
2. You can view only TEXT file with extension character.
3. Maximum file numbers to be viewed are 99 files.

More than 100 files can be inserted into the Document folder but they are not displayed on the LCD screen.

 


Using the Menus

◆ Menu Operations

1. To Enter a Menu


Press and hold the (MENU · VOL · NAVI)  key.



Press and Hold



2. Jog Key Operations in Menu Mode

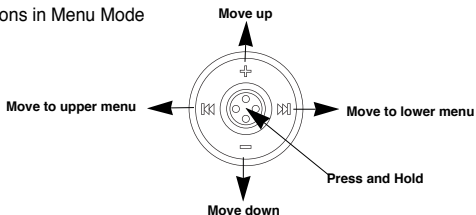

Using the Menus




◆ List of Menu Functions

Step1	Step2	Step3	Step4	Note
RECORD	QUALITY	32Kbps, 64Kbps, 96Kbps, 128Kbps, 192Kbps	Voice : 44KHz/J-Stereo/MP3 Line : 44KHz/J-Stereo/MP3	P.22
	METHOD	OFF, CD-SYNC, VOR	General recording mode. Recorded files are separated by the sections that have no data. Recording is paused in these silent sections	P.23
MUSIC	INTRO	INTRO START	Play back only the first 10 seconds of the file	P.46
	DISPLAY	FILE NAME, ID3-TAG, LYRIC	Display File name, ID3 Tag, and Lyrics, respectively	P.51
	PLAY LIST	OFF, BOOK MARK, M3U	Move to General Browser, BMK List Browser, and M3U List Browser, respectively	P.36,37
	PLAY SPEED		Control playback speed from low to high, i.e., 70%, 100%, and 120% of the normal speed	P.47
AUDIO	USER EQ		◀ : Frequency Control, ▲, ▼ : Level Control, : Set & Quit	P.35
GENERAL	LIGHT TIME		The Power Off time is adjustable within 9 seconds. Always ON	P.47
	CONTRAST		Control the contrast setting from Min. to Max.	P.48
	POWER OFF		Set between 1min to 10 min. Power Off is available	P.48
	SLEEP	OFF, 15, 30, 60, 90	Disabled Sleep function and Automatic Turn-Off after 15, 30, 60, or 90 minutes	P.49
	PASSWORD		Password function & Lock function	P.47
SYSTEM	LANGUAGE	Arabic, Czechoslovak, English, French, Chinese-Simp., German, Hungarian, Italian, Japanese, Korean, Polish, Portuguese, Russian, Spanish, Chinese-Trad., Turkish	Select a language	P.49
	MEMO		Display memorized files	P.39,40
FM	MEMORY INFO		Display the total capacity and used capacity	P.46
	ST/MONO	STEREO, MONO	Hear FM in Stereo or Mono mode	P.29
	AUTO MEMORY	YES, NO	Execute FM Auto Memory	P.28

 
 

 




Repeat / Shuffle Playback


- **Repeat Playback:** Repeats only the selected folders or songs.
- **Shuffle Playback:** Plays songs in an arbitrary sequence regardless of the sequence of songs.
Each press of the REPEAT/FM() key changes the mode.

Repeat icon



Icon	Operation
	Off
	Turns off the Repeat function
	Repeats only the current song
	Repeats only the folder containing the current song
	Shuffles and repeats the playback for all the songs in the folder containing the current song
	Shuffles and repeats the playback for all songs

● Repeat A-B

Press the REPEAT/FM() key during playback to activate the Repeat A-B function.

Press the key to set the start point (A), and press the key again to set the end point (B) and start Repeat A-B. If you press the key one more time, the function is deactivated.


Repeat A-B is
Activated



Equalizer Function

- ◆ Press the REC/EQ (● ||) key to change the Equalizer mode.
Press the REC/EQ (● ||) key changes to one of the following modes.


 
Equalizer Icon




Icon	Operation	Remark
EQ Nor	General Mode	These modes are set by default.
EQ Rock	ROCK	
EQ Clas	CLASSIC	
EQ Jass	JAZZ	
EQ Bass	BASS	
EQ User	USER	You can select your desired settings, as shown in the following figure.

- ◆ Using the User Defined Equalizer Settings

  1. Enter MENU → AUDIO → USER EQ.



Exit the Menu

 

Control Level

2. Set the equalizer settings using the Jog key.

Control Frequency



Playlist

What's a Playlist?


Allows you to playback only the songs you specify among the saved songs.

◆ Registering a Playlist

1. BOOKMARK

 
Briefly press the Menu Key while in Playback Navigation mode or General Navigation mode, and the file



icon changes to  and the current or selected file is registered to the BOOK MARK list.

◆ Playing Back Bookmarked Songs

Select MENU → MUSIC → PLAY LIST → BOOK MARK.



Press the PLAY (▶||) key. The songs in the BOOK MARK list are played sequentially.

If you want to stop playback of the BOOK MARK list and listen again in General mode,

select MENU → MUSIC → PLAY LIST → OFF.

Repeat/Shuffle playback for the BOOK MARK list is the same as in General mode.



Note

You can bookmark up to 100 files. If a file cannot be bookmarked because there are already 100 bookmarks, [BOOK MARK FULL] will be displayed on the LCD.

 
Playlist

2. M3U

① Open the music files on your Juke Box with Winamp. ② Press LIST (LIST OPTS) on the bottom right of Winamp, and press SAVE (SAVE LIST) to save the playlist in the PLAYLIST folder on your Juke Box. Make sure that the extension remains M3U.

◆ Playing Back an M3U Playlist

MENU → MUSIC → PLAY LIST → OFF.



If you want to stop playback of an M3U Playlist and listen again in General mode, select MENU → MUSIC → PLAY LIST → OFF.

Repeat/Shuffle playback for an M3U Playlist is the same as in General mode.



Caution

Make sure to save the M3U playlist file in the PLAYLIST folder on you Juke Box. The PLAYLIST folder is used to store M3U files only in Windows Explorer. If you do not save the M3U file in the PLAYLIST folder, the playlist playback will not be available with your Juke Box.

Note

1. A M3U file can contain up to 500 songs.
2. You cannot save more than one M3U file.




Navigation

The Navigation function allows you to search for a saved folder or files during playback.


1. To Enter Navigation Mode:

Press the (MENU · VOL · NAVI)  key during playback.

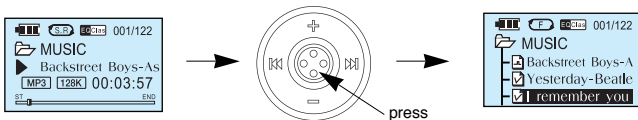

2. Navigate to your desired songs using the Jog key.

 3. If you press the STOP/HOLD () key to return to playback mode.




Note

If you enter the Navigation mode during Bookmark or M3U playback, the BOOK MARK list or M3U list will be navigated.

Using the Memo Function

Edit information about your acquaintances (telephone number, e-mail address) on your PC, then download them to your Juke Box and view the information on your Juke Box. You may need to finish the program installation on page 8 to use this function.



1. Double-click the  icon to run the program.

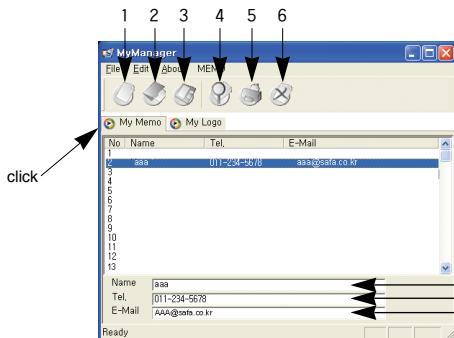



1. New : Create a new file.
2. Open : Open a file.
3. Save : Save the edited content.
4. Find : Search for acquaintance information.
5. Print : Print a file.
6. Delete: Delete the selected acquaintance information.

Using the Memo Function

2. After inserting name/phone number/email, press the [Enter] key to save information in the selected number.
3. After inserting all acquaintance information, click the #3 toolbar (Save).

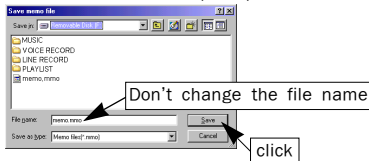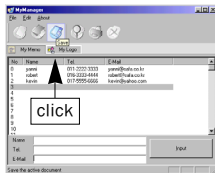

  4. Download the edited file under the ROOT folder in the player.
(For uploading, the player should be connected to the PC. See page 9.)
5. Select MENU → SYSTEM → MEMO.
6. Search the memo by pressing the jog key upward or downward.




Note

1. The memo function is enabled in the stop mode only.
You can input information of up to 250 persons.
2. You can use E-Book for the memo handling purpose. When you open "memo.mmo" file with Notepad, and delete the contents and copy over the novel/article contents, you can retrieve it using Menu → System Memo menu."
(But, File size must be smaller than 64KB).

Using the Logo Function

Download a logo file that is created on your PC to your Juke Box.
The Logo function allows a custom logo to be displayed when your Juke Box turns.
You may need to complete the program installation on the page 8 to use this function.


1. Double-click the  icon to run the program.
 My Manager

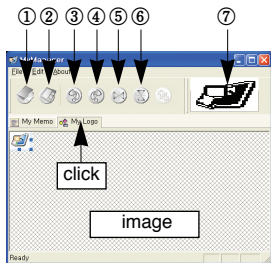


- ① Open : Open an image file.
- ② Save : Save edited content.
- ③ Rotate : Rotate the image counterclockwise.
- ④ Revolve : Revolve the image.
- ⑤ Flip Horizontal : Flip the image horizontally.
- ⑥ Flip Vertical : Flip the image vertically.
- ⑦ Preview : Show how the image will look on the LCD.

Using the Logo Function

- Click the Open icon on the tool-bar.

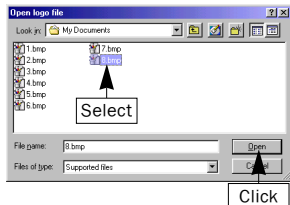

Only the picture shown in the box will be displayed on the LCD.

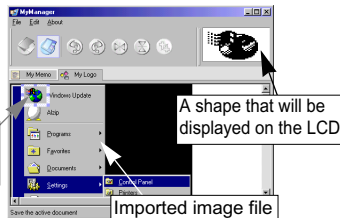

- Click the Save icon on the tool-bar when you have finished editing the image.



Insert the name of the folder to save and click it.
(You should not change the file name)

- Download the saved file under the root folder of your Juke Box.
- Disconnect your Juke Box from your PC. Turn on your Juke Box, and the downloaded image will be displayed during boot-up.

Using a PC net PC

What's a PC net PC?

A PC net PC allows you to control a PC (host PC) in your house or company from another PC (Client PC) in a remote place while viewing the host PC's screens.

This manual includes only the required information. For more information, visit www.pcnetpc.com.



Client PC



Host PC

Caution


1. Both the Host PC and the Client PC should be connected to a LAN.
2. This function may not work if the PC uses a private IP or a firewall is installed.
3. You cannot run DOS applications using this function.

Steps for Use: Follow these steps sequentially.


1. Register as a new user Visit www.pcnetpc.com, and get your user ID and password by completing the registration process.
2. Install the program on the Host PC
Install the program on the Host PC using the Installation CD.
3. Configure the Host PC.
4. Use on the Client PC.

Using a PC net PC

Configuring the Host PC

1. Connect your Juke Box to the USB jack of the Host PC using the USB cable when the program installation has finished. (For how to connect, see page 9)
2. Double-click the () icon on the Windows Desktop.

PC net PC

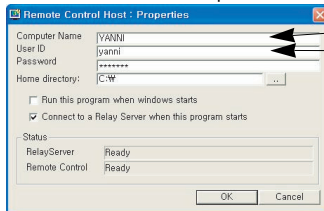

1. Type your user ID.
2. Type your password.
Enter a different user ID and password from those that you registered with on www.pcnetpc.com.

3. The program installation is successful when the icon below is displayed on the Windows system tray.




The icon when the PC net PC program is operating.

To exit PC net PC, right-click this icon and click Exit on the context menu displayed.

Using a PC net PC

Using PC net PC on a Client PC (Remote PC)

1. Connect your Juke Box to the USB jack of the Remote PC using the USB cable. (For how to connect, see page 9)
2. Double-click PC net PC.exe in the local disk of your Juke Box.

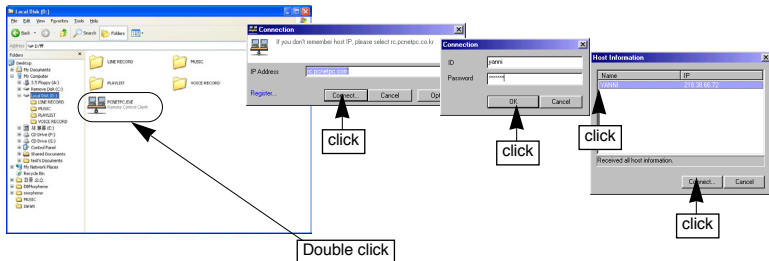

3. The Host PC screen is displayed.

Now, you can use the host PC in the same way as if you were using it directly.

✱ For how to transfer files between the Client PC and the Host PC and configure the options, visit www.pcnetpc.com.



Additional Menu Functions

◆ Song Introduction (INTRO)

Plays back the first 10 seconds of the saved music files so that you can know what songs they contain.

1. Enter MENU → MUSIC → INTRO START.






2. Press the (MENU · VOL · NAVI) key.

Mode	Operation
INTRO	Only the first 10 seconds of each file is played back.

◆ Checking Memory Information. (MEMORY INFO)

   Enter MENU → SYSTEM → MEMORY INFO.





Note

- 1) If you press the STOP/HOLD (■) key during INTRO operation, the operation is cancelled.
- 2) If you press the PLAY (▶) key during INTRO operation, the operation is paused at the current state.
- 3) If you press the Next (MENU · VOL · NAVI) key during INTRO operation, the operation is cancelled and the next song is played back after the current song.



Additional Menu Functions

◆ Controlling Playback Speed

  1. Enter MENU → MUSIC → PLAY SPEED.






  2. LOW plays at 70% of normal speed. HIGH plays at 120% of normal speed.



◆ Setting Backlight Time

   1. Enter MENU → GENERAL → LIGHT TIME



2. Set the desired backlight time by pressing the Up and Down buttons on the Jog key, and press the (MENU · VOL · NAVI) key.




Setting Values	Operation
OFF	Backlight is turned off all the time.
1,2,--,9	Backlight is turned on for a set period of time.
ON	Backlight is turned on all the time.



Additional Menu Functions

◆ Controlling the Contrast

   1. Enter MENU → GENERAL → CONTRAST






2. Set the desired contrast by pressing the Up and Down buttons on the Jog key, and press the (MENU · VOL · NAVI) key.

◆ Changing the Auto Power Off Time

The power is turned off automatically when your Juke Box is not used for a specified period of time. Follow these steps to change the time.

   1. Enter MENU → GENERAL → POWER OFF





2. Set the desired time by pressing the Up and Down buttons on the Jog key, and press the (MENU · VOL · NAVI) key.

Additional Menu Functions

◆ Setting the Sleep Time

Your Juke Box is turned off automatically after the specified time. It is convenient when you want fall a sleep while listening to music.

  1. Enter MENU → GENERAL → SLEEP





2. Set the desired time by pressing the Up and Down buttons on the Jog key, and press shortly the (MENU · VOL · NAVI) key.

◆ Setting the Language

The letters on the LCD may not be shown properly depending on the language of the operating system when you input the song information. If letters appear broken, follow these steps to change the language.

  1. Enter MENU → SYSTEM → LANGUAGE



2. Set the desired language by pressing the Up and Down buttons on the Jog key, and press shortly the (MENU · VOL · NAVI) key.

 
 



Additional Menu Functions

◆ Password setting

If you have set the 4-digit password, you have to input the password when turning on the player. The password function is disabled in the factory setting (0000).

1. Select MENU → GENERAL → PASSWORD.



2. Input the number by pressing the jog key upward/ downward and press the (MENU · VOL · NAVI)  key shortly.

Additional Menu Functions

◆ Setting the LCD Display Mode

1. Enter MENU → MUSIC → DISPLAY



2. Set the desired mode by pressing the Up and Down buttons on the Jog key, and press the (MENU · VOL · NAVI) key.

Mode	Operation
File Name	Displays only the file name
ID3 TAG	Displays the ID3 tag. If the ID3 tag is unavailable, displays the file name only.
LYRIC	Displays the song lyrics. If the song lyrics are not available, displays the file name only.

※ Your Juke Box supports *.lrc type of lyrics file. Follow these steps to display the lyrics.

1. Edit the lyrics file using an LRC editing program on your PC. Download the edited lyrics file to your Juke Box. (Editing methods may differ from program to program. Refer to the program's user manual and manufacturer's web site.)

For example, visit www.nicemusic.co.kr.

2. Download the edited lyrics file to the folder in which the song is saved. The lyrics file name must be the same as the song file name.

For example, if song name is "love2.mp3", the lyric file name should be "love2.lrc".

3. Set the LCD Display mode to LYRIC.

4. Playback the song on your Juke Box, and the lyrics will be displayed on the LCD.



 
Upgrading Firmware

Firmware is the internal program which operates your Juke Box.

Your Juke Box provides the functionality to upgrade the firmware.

Please check Safa media, Co., Ltd. web site for available firmware upgrades, anytime while using your Juke Box. If there is a new upgrade, follow these steps to upgrade the firmware of your Juke Box.

1. Copy the new firmware version file, downloaded onto your PC to the root folder of your Juke Box using the USB cable.
2. Disconnect the USB cable and power your Juke Box ON. The firmware upgrade will proceed automatically.



Firmware Upgrade Screen on the LCD

Troubleshooting



Symptom	Items to Check	Action
My Juke Box does not turn on.	The battery has run out.	Recharge your battery.
Recording does not work.	Your Juke Box is set to Lock mode. The battery has run out. The space for recording is full.	Unlock the Lock mode. Recharge your battery. Delete unnecessary files.
Playback does not work.	Your Juke Box is set to Lock mode. The battery has run out. There is no file.	Unlock the Lock mode. Recharge your battery. Check the recording number.
There is no sound coming through the earphones.	The earphone plug is not firmly connected to your Juke Box. Volume is set to minimum.	Check whether your earphones are firmly connected to your Juke Box. Change the volume.
LCD is not displayed.	The battery has run out. The Juke Box is malfunctioning.	Recharge your battery. Sting reset hole.
Downloading does not work.	The battery has run out. The USB cable is not firmly or correctly connected.	Recharge your battery. Check whether the USB cable is firmly and correctly connected.



Specifications

Item		Specification
Recording	Sound Quality	See Page 22,23
	Maximum Recording Time	
	Mono/Stereo	
	Recording Format	
Recording Media	Built-in Memory	1.5GB
Supported Files	MP3,WMA,OGG,ASF	MP3: All bit rates, WMA: 32Kbps ~ 192Kbps
FM	Frequency Band	87.5 ~ 108 MHz
	Antenna	Earphone type
Charged Battery Playback Time		10 hours
PC Interface		USB2.0
Operating System		Windows 98SE, ME, 2000, XP
Main Power		3.7V Li-POLYMER
Maximum Output		Earphone (16 Ω): 15mW/CH
Recording Input		Built-in microphone, external audio device, external microphone Telephone call, FM Radio
S/N ratio		90dB
Frequency Response		20Hz ~ 20KHz
Dimensions		Width: 61mm, Length: 61.5mm, Height: 20.5mm
Weight		79g

Warranty

Services Not Covered

1. When a problem occurs due to user's careless handling.
2. When the user does not follow the warnings and/or cautions
3. When a problem occurs due to a natural disaster such as fire, salinity, flood, war.

Service Information

1. This product is manufactured under strict quality control and inspection.
2. If a problem occurs within the warranty period and the product has been used normally, repairs of the product will be provided free of charge.
3. If a problem occurs within the warranty period, due to user's fault, the repair service will be charged to the user.
4. Make sure to fill in the warranty.
(If any item has been skipped on the warranty, free service may not be available.)
5. If any problem occurs with your product, contact your product distributor.
(Free of charge repairs or exchanges are processed after first checking with the head office.)
6. Accessories are excluded from free of charge service.
7. All items except the above items will be rewarded according to the stipulations for customer rewards.
8. The free of charge warranty period is for one year only from date of purchase
※ Damage due to consumer fault is excluded.

Product	Digital Micro Juke Box			
Model	HMP-110R			
Purchase Date	Year	Month	Day	Warranty Period 1 year
Product Distributor				Purchase Price

SAFA SAFA MEDIA Co., Ltd.

SAFA SAFA MEDIA Co., Ltd.

15F DongWon Securities B/D, 98-4 Carakbon-dong, Songpa-gu, Seoul, Korea

TEL : +82 2-3400-5200(Rep)

FAX : +82 2-3401-4142

<http://www.safa.co.kr>

SF69-00397B